



Kinetix 6200 and Kinetix 6500 IAM and AM Power Modules

Catalog Numbers 2094-BC01-MP5-M, 2094-BC01-M01-M, 2094-BC02-M02-M,
2094-BC04-M03-M, 2094-BC07-M05-M,
2094-BMP5-M, 2094-BM01-M, 2094-BM02-M, 2094-BM03-M, 2094-BM05-M

Topic	Page
About the IAM and AM Power Modules	1
Important User Information	2
Catalog Number Explanation	3
Before You Begin	3
Setting the Ground Jumper in Ungrounded Power Configurations	4
Install the IAM/AM Power Modules	7
Connector Data	12
Power Wiring Requirements	15
Motor Overload Protection	17
Additional Resources	18

About the IAM and AM Power Modules

The Kinetix® 6200 or Kinetix 6500 modular drives consist of an integrated axis (IAM) power module and up to seven axis (AM) power modules each coupled with a Kinetix 6200 or Kinetix 6500 control module. The IAM and AM power modules provide power for up to eight servo motors or actuators.

Refer to the Kinetix 6200 and Kinetix 6500 Modular Servo Drives User Manual, publication [2094-UM002](#), for detailed information on wiring, applying power, troubleshooting, and integration with ControlLogix®, CompactLogix™, or SoftLogix™ controller platforms.