


Connecting Grounded Differential Signals

You can connect grounded differential signals to the NI 9234.

Figure 3. Connecting Grounded Differential Signals to the NI 9234

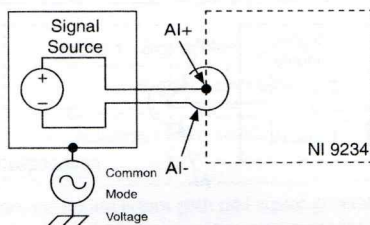

Make sure the voltage on the AI- shell is in the common-mode range to ensure proper operation of the NI 9234. The AI- shell is protected against accidental contact with overvoltages within the overvoltage protection range.

Related Information

Overvoltage Protection on page 15